



## **8-Zone Panel Remote (RGB+CCT)**


Model No.: B8

### **1. Features**

This 8-zone panel remote is made of elegant stalinite panel and high-precision touching IC; touching is more stable and sensitive. And adopt world-wide used 2.4GHz frequency, GFSK control method, with the features of low power consumption, long distance transmitting, strong anti-interference and fast communication rate; can control specified Mi-Light/MiBoxer smart light with color, color temperature, saturation and brightness changing.

## 2. Products Key Diagram

 **Remark:** When touching the button, LED indicating lamp will flash once with different sound(Touch slider with no sound).

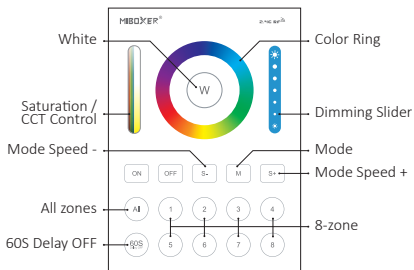

Touch the color ring to change colors.



Under white light mode, adjust color temperature;  
Under color light mode, change color saturation.



Slide the brightness slider to adjust the brightness.



Press the button to get white light.



Turn on the linked lights. Long press "ON" button for 10 seconds to set up the button sound.



Turn off the linked lights. Long press "OFF" button for 10 seconds to close the button sound.



Dynamic mode switching button.



Slow the speed on present dynamic mode.



Accelerate the speed on present dynamic mode.



Press "ALL" button, to control all linked lights, and the indicating lamp shine meanwhile.



Press the button, to open the "60S delay" Function, the indicating lamp will shine; Press again cancel the "60S delay" Function, the indicating lamp will be off.



Press 1-8 zone, to control the corresponding zone linked lights, and indicating lamp will shine.

## 2. Linking Code / Unlinking Code Instructions

### Linking Code Instructions



Click the 1-8 zones button you want to link, the corresponding indicating lamp will shine.



2

Switch off light, after 10 seconds then switch on again.



Link / Unlink button

Short press "ON" button 3 times within 3 seconds when light on.



4

Lights blink 3 times slowly means linking is done successfully.



Linking failed if light is not blinking slowly, Please follow above steps again. (Note: Light that have linked can't link again)

### Unlinking Code Instructions



Click the 1-8 zones button you want to link, the corresponding indicating lamp will shine.

**Unlinking must be the same zone with the Linking**



 
2

Switch off light, after 10 seconds then switch on again.



Link / Unlink button

Short press "ON" button 5 times within 3 seconds when light on.




4

Lights blink 10 times quickly means unlinking is done successfully.



Unlinking failed if light is not blinking quickly, Please follow above steps again. (Note: Light haven't linked that don't need to unlink)

## 4. Installation / Dismantlement

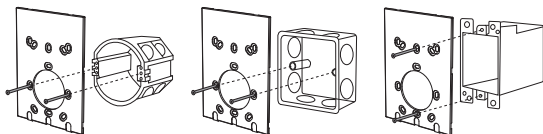 

Input 1:

3V(2\*AAA Battery)



Input 2:

AC90~120V  
or AC180~240V


Power  
Supply

DC 3.3V

  MiBoxer specified power supply  
need to be purchased separately.

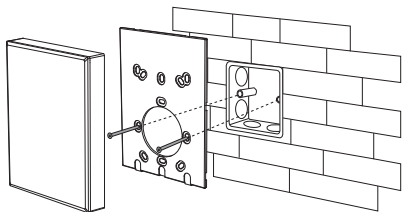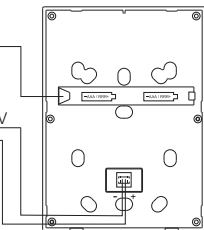

Installation

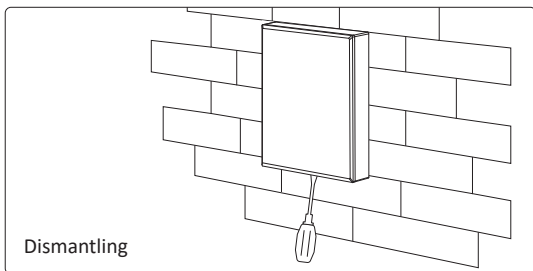 

## 5. Attention

1. Please check the cable, and make the circuit is correct before power on.
2. When installation, please handle with care to avoid the broken of the glass panel.

Made in China

